

## Chapter 4

### Installation

#### Contents

	Page No.
<b>4.1 Installation considerations .....</b>	<b>4-1</b>
<b>4.2 Unpacking each component of the system .....</b>	<b>4-1</b>
<b>4.3 Inspection of each component unit and accessories .....</b>	<b>4-1</b>
<b>4.4 Setting the units .....</b>	<b>4-1</b>
4.4.1 Antenna Unit .....	4-1
4.4.2 Processor and Operation Unit.....	4-2
<b>4.5 Cable routing and connections .....</b>	<b>4-2</b>
4.5.1 Antenna .....	4-2
4.5.2 Processor Unit .....	4-2
<b>4.6 Installation procedure .....</b>	<b>4-3</b>
4.6.1 Installing the Transceiver Unit.....	4-3
4.6.2 Fitting the Aerial .....	4-4
4.6.3 Connecting the cable .....	4-5
4.6.4 Installing the Processor Unit and Operation unit.....	4-7
4.6.4.1 Table mounting.....	4-7
4.6.4.2 Flush mounting .....	4-10
4.6.5 Connecting the cable to the Processor unit .....	4-12
4.6.6 Link setting for the gyrocompass .....	4-13
4.6.7 Ferrite core assembling for Power cable.....	4-14
<b>4.7 Setting up after installation.....</b>	<b>4-15</b>
4.7.1 Transmission timing .....	4-15
4.7.2 Ship's heading setup.....	4-16
4.7.3 Resetting Manual GAIN/STC (Height)/Manual STC.....	4-16
4.7.3.1 Manual GAIN setting.....	4-16
4.7.3.2 STC (Height) setting .....	4-17
4.7.3.3 Manual STC setting .....	4-18

	Page No.
<b>4.8 Setting up option .....</b>	<b>4-19</b>
4.8.1 AIS Interface (Option) .....	4-19
4.8.2 Remote Display operation.....	4-20
4.8.2.1 Connecting the Remote Display.....	4-20
4.8.2.2 Required set up.....	4-20
4.8.2.3 Possible operation on Remote Display .....	4-20
<b>APPENDIX 1.....</b>	<b>4-22</b>
Installation of the ATA module, MRE-300.....	4-22
Installation of the AIS module, AIS-100.....	4-22
Installation of the Gyro Interface module, KSA-08A.....	4-23
<b>APPENDIX 2.....</b>	<b>4-26</b>
Optional cables pinouts and cable color-coding designation .....	4-26