

Chapter 5

Basic Operation

Contents

	Page No.
5.1 Introduction.....	5-1
5.2 Control Panel Layout.....	5-1
5.3 Operating Controls	5-1
5.4 Getting Started	5-7
5.5 Basic Radar Operations	5-8
5.5.1 Range Scale Selection	5-8
5.5.2 Transmission Pulse selection	5-8
5.5.3 Gain control	5-10
5.5.4 Anti-clutter SEA control.....	5-10
5.5.5 Anti-clutter RAIN control	5-11
5.5.6 Bearing measurement using a single EBL.....	5-11
5.5.7 Bearing measurement using two EBLs.....	5-11
5.5.8 Range measurement using Range Rings	5-12
5.5.9 Range measurement using VRM.....	5-12
5.5.10 Range measurement with two VRMs.....	5-12
5.5.11 Measuring the distance and bearing between any two points by offset 1st EBL/1st VRM	5-12
5.5.12 Picture off-centering.....	5-13
5.5.13 Selection of presentation mode	5-13
5.5.14 Setting the Guard Zone	5-15
5.5.15 Control panel brilliance	5-16
5.5.16 Displaying the navigational data	5-16
APPENDIX 1 Interpretation of Radar Images.....	5-18
APPENDIX 2 Receiving the Radar Beacons and SARTs.....	5-22