

Chapter 6

Using The Menu

Contents

	Page No.
[Common key operation]	6-1
6.1 RADAR Menu	6-2
6.1.1 Picture Stabilization	6-2
6.1.2 Ship's Heading.....	6-3
6.1.3 Ship's Speed.....	6-3
6.1.4 Set and Drift.....	6-3
6.1.5 Cursor Position	6-4
6.1.6 Vector Time.....	6-4
6.1.7 CPA Alarm Limit	6-5
6.1.8 Data indication	6-5
6.2 DISP Menu	6-6
6.2.1 MARK	6-6
6.2.1.1 VRMs and EBLs	6-6
6.2.1.2 VRM Unit.....	6-6
6.2.1.3 RANGE RINGS	6-6
6.2.1.4 BRG TRUE/REL (Bearing True or Relative)	6-7
6.2.1.5 STERN MKR (Stern Marker)	6-7
6.2.1.6 CURSOR L/L (Cursor Position Indication).....	6-7
6.2.2 ECHO (Echo Menu).....	6-7
6.2.2.1 TRAILS (Echo Trail Setting)	6-7
6.2.2.2 IR (Interference Rejection)	6-7
6.2.2.3 ENH (Echo Enhancement)	6-7
6.2.2.4 TUNE (Receiver Tuning Mode)	6-8
6.2.2.5 MAIN TUNE (Manual Tuning Set)	6-8
6.2.2.6 DAY/NIGHT (Day or Night Screen)	6-8
6.2.3 NAV (Nav Menu).....	6-8
6.2.3.1 STAB (Screen Stabilizing Mode)	6-8
6.2.3.2 PLOT MODE (Plotting Mode).....	6-9
6.2.3.3 TARGET ALL CLEAR (Plotting Target All Clear).....	6-9

6.2.3.4	ID DISP (ID Number Display)	6-9
6.2.3.5	AIS (Automatic Identification Systems) Data Display.....	6-9
6.2.3.6	Navigation Display, Map Function.....	6-9
6.2.3.7	TM RESET (True Motion Center Reset)	6-10
6.2.3.8	OS PAST CRS (Own Ship's Past Course).....	6-10

6.3 ADJUST MENU6-10

6.3.1	ADJUST	6-10
6.3.1.1	Screen Contrast Settings.....	6-10
6.3.1.2	Navigation Position Alignment	6-11
6.3.1.3	RADAR SENSITIVITY (Selecting Auto/Man Receiver Functions)	6-11
6.3.2	PRESET	6-11
6.3.2.1	AUTO TUNE (Auto Tune Preset)	6-12
6.3.2.2	MANUAL TUNE (Manual Tune Center Preset)	6-12
6.3.2.3	GAIN AUTO/MANUAL (Gain Preset)	6-12
6.3.2.4	SEA AUTO/MANUAL/HARBOR (STC Preset)	6-13
6.3.2.5	RAIN AUTO/MANUAL (FTC Preset)	6-13
6.3.2.6	MBS (Main Bang Suppression).....	6-13
6.3.2.7	TARGET LEVEL (Target Detection Level).....	6-14

6.4 SYSTEM MENU6-14

6.4.1	I/O SETUP	6-14
6.4.1.1	HDG INPUT (Heading Input)	6-14
6.4.1.2	GYRO SET (Gyro Initial Setting).....	6-14
6.4.1.3	SEA STAB SPD (Water Speed Input)	6-15
6.4.1.4	GND STAB SPD (Ground Stabilized Input).....	6-15
6.4.1.5	LOG PULSE (Log Pulse Rate).....	6-16
6.4.1.6	GYRO (Gyro Gear Ratio).....	6-17
6.4.1.7	Serial Input Format	6-17
6.4.1.8	SERIAL TRANSMIT (Serial Output Interval).....	6-17
6.4.2	SYSTEMSETUP.....	6-17
6.4.2.1	RANGE DISP (Range Scale Display)	6-17
6.4.2.2	BUZZER	6-17
6.4.2.3	DELAY (Transmission Timing Adjustment).....	6-18
6.4.2.4	HDG (Ship's Heading Adjustment).....	6-18
6.4.2.5	HEIGHT (STC Law Selection)	6-18

	Page No.
6.4.2.6 TM RESET (True Motion Reset Position).....	6-19
6.4.2.7 KEY SOUND (Key Click Sound).....	6-19
6.4.2.8 BUZZER FREQ (Buzzer Sound Frequency)	6-19
6.4.2.9 ALARM MODE (Alarm Zone Set Mode).....	6-20
6.4.2.10 TRAIL MODE (Echo Trail Mode)	6-20
6.4.2.11 OFF CENTER (Off-center Mode)	6-20
6.4.3 BITE (Built In Test Equipment)	6-21
6.4.3.1 ALARM TEST (Alarm System Test).....	6-21
6.4.3.2 ATA TEST (ATA Tracking Test Mode)	6-21
6.5 MAINTENANCE MENU	6-22
6.5.1 ANTENNA	6-22
6.6 Operation of the EPA	6-23
6.6.1 Using the EPA.....	6-23
6.6.2 CPA and TCPA.....	6-24
6.6.3 EPA plotting on the screen.....	6-24
6.6.4 Alarm display	6-24
6.6.5 Explanation of the EPA terms	6-25
6.6.6 VECT TIME (Selecting the Vector Time).....	6-26
6.6.7 EPA symbols.....	6-26
6.6.8 WARNING LIMIT (Setting the Warning Limit of CPA and TCPA)	6-27
6.6.9 TARGET ALL CLEAR (Clearing all target plots).....	6-27
6.6.10 ID DISP (Displaying Target ID Number).....	6-27
6.6.11 Correcting the latest plotting position.....	6-27
6.7 Operating the ATA	6-28
6.7.1 Using the ATA	6-28
6.7.2 Outline of the ATA system	6-28
6.7.3 ATA functions	6-29
6.7.4 Operating procedures	6-29
6.7.5 ATA symbols	6-29
6.7.6 Setting the Guard Zone	6-30
6.7.6.1 To set up the position of the Guard Zone	6-30
6.7.6.2 To set up the depth and width of the Guard Zone.....	6-31

6.8 Operating the AIS	6-32
6.8.1 Outline of AIS	6-32
6.8.2 Setting the AIS to work	6-32
6.8.3 AIS data display	6-32
6.8.4 AIS target symbols	6-33